



PARTS DIAGRAM

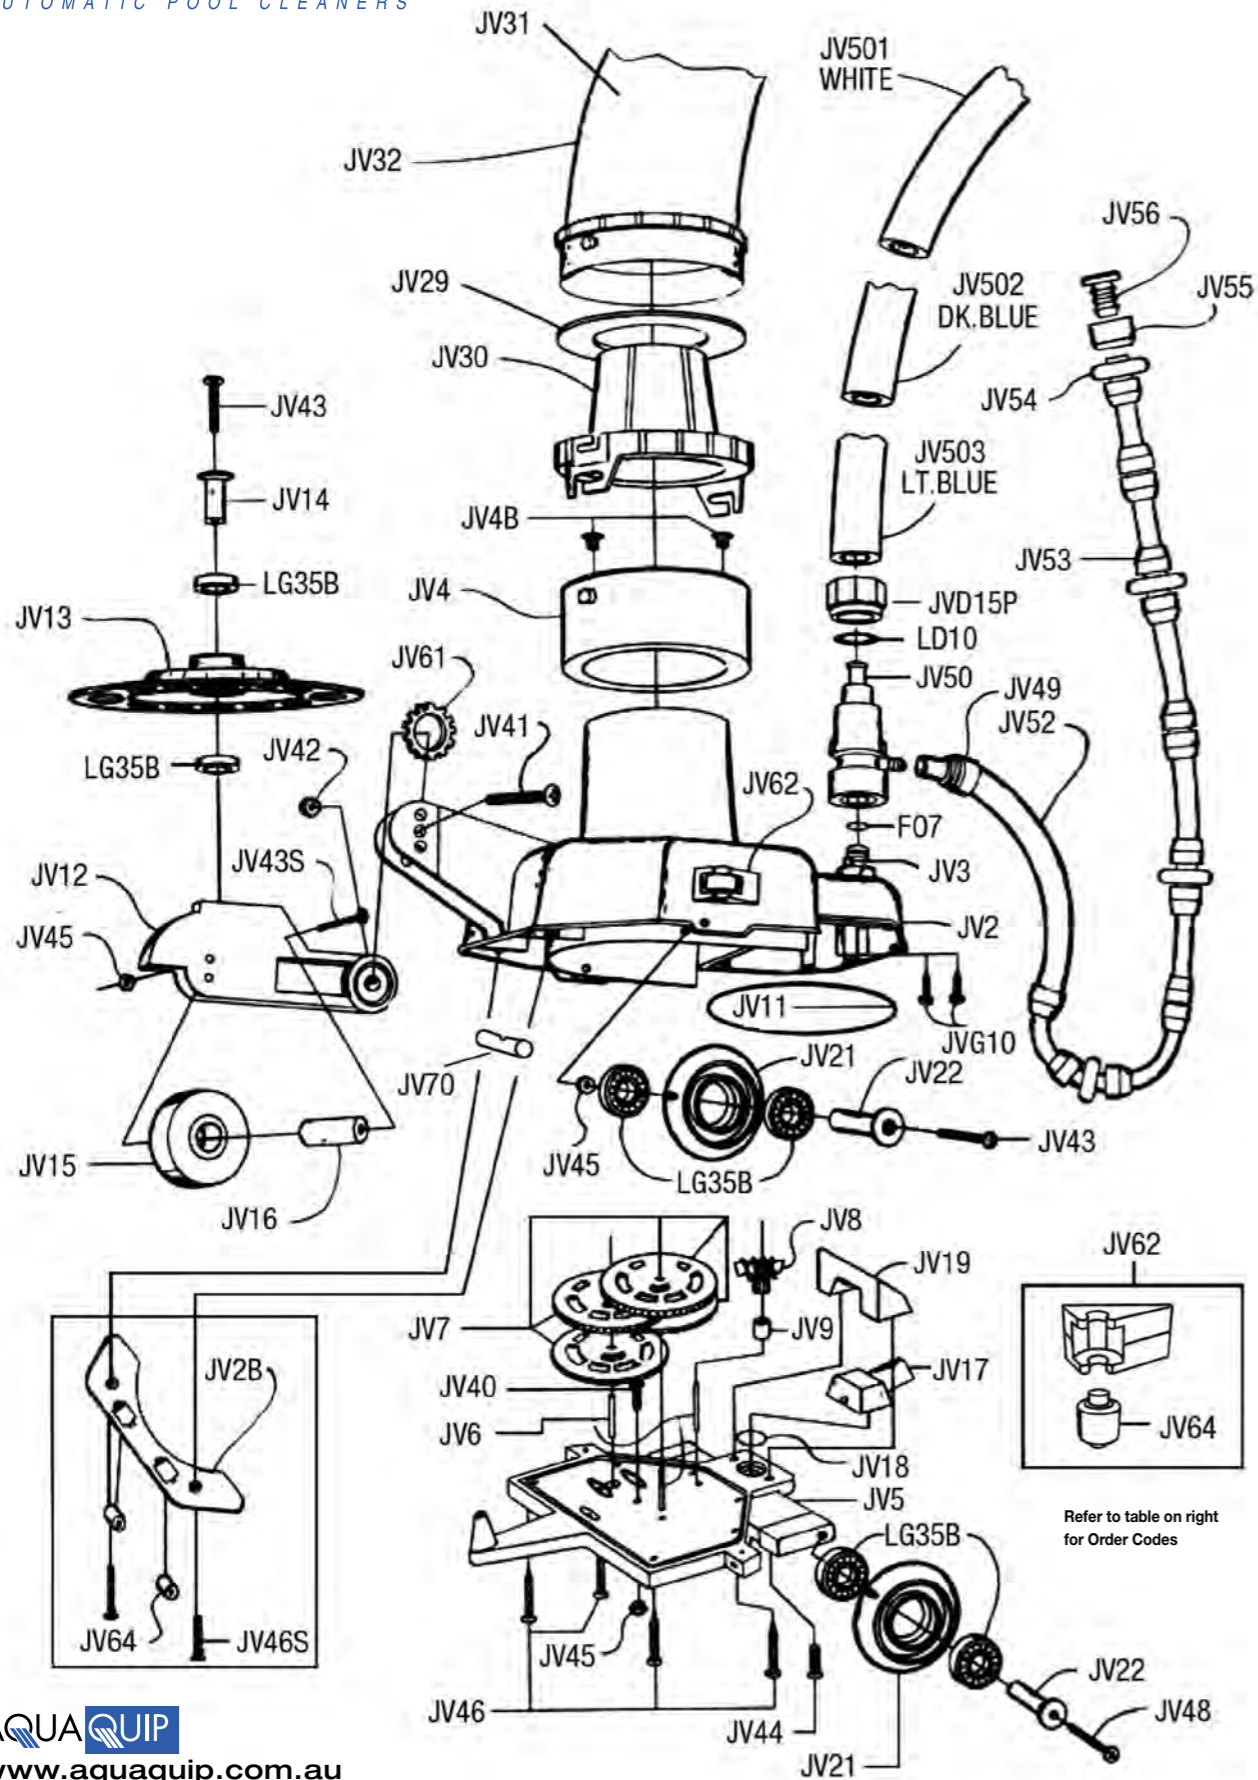

Refer to table on right for Order Codes

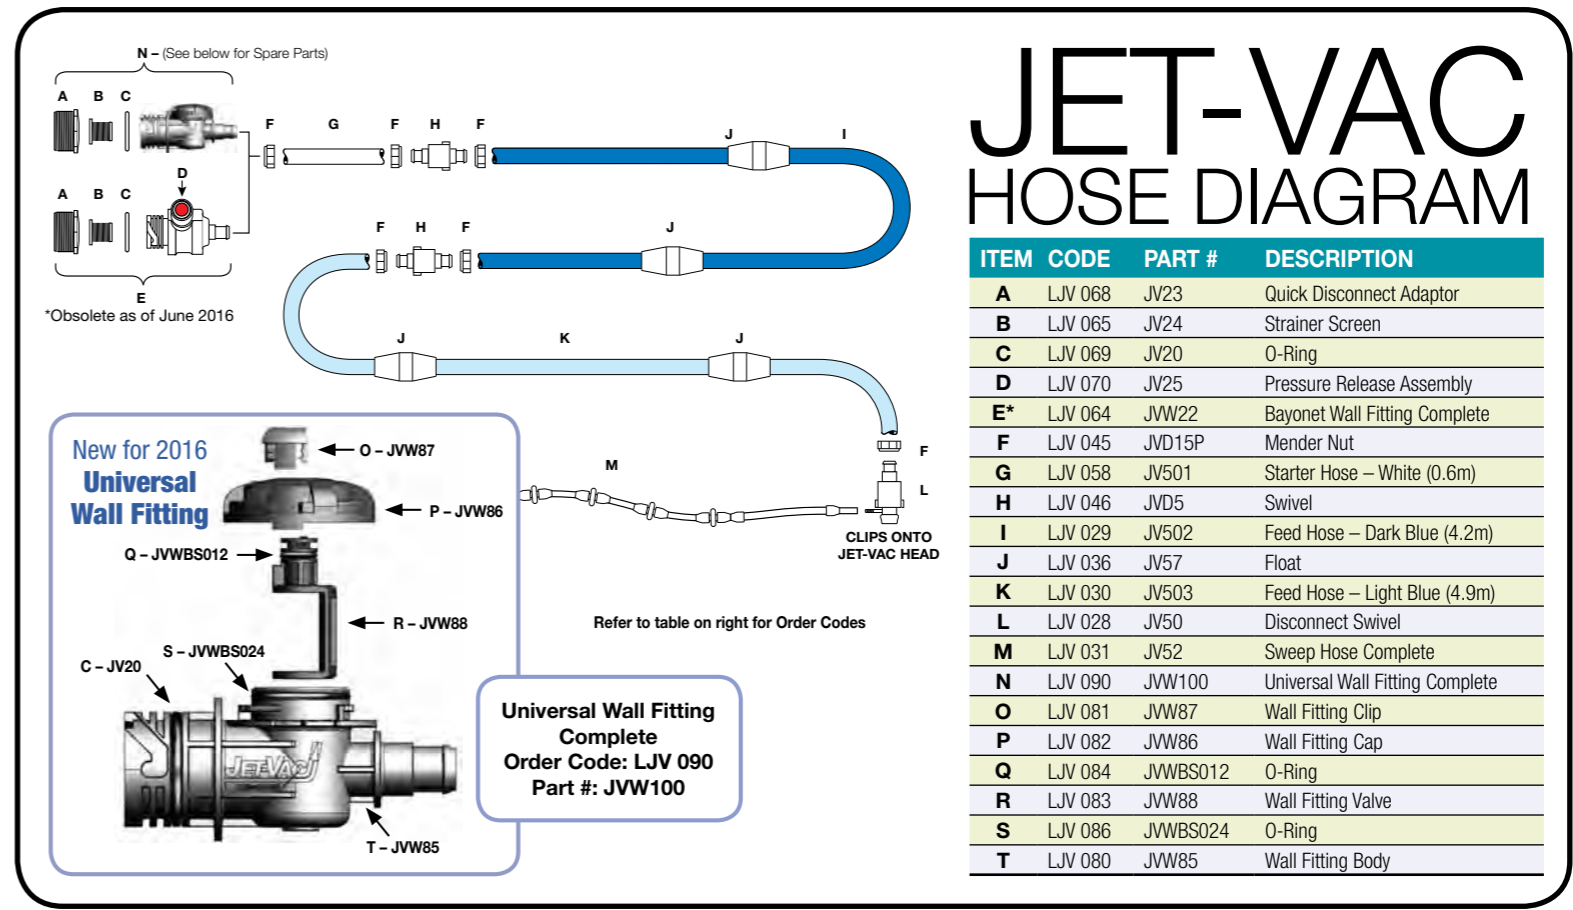

JET-VAC HOSE DIAGRAM

ITEM CODE	PART #	DESCRIPTION
A	LJV 068 JV23	Quick Disconnect Adaptor
B	LJV 065 JV24	Strainer Screen
C	LJV 069 JV20	O-Ring
D	LJV 070 JV25	Pressure Release Assembly
E*	LJV 064 JWV22	Bayonet Wall Fitting Complete
F	LJV 045 JVD15P	Mender Nut
G	LJV 058 JV501	Starter Hose - White (0.6m)
H	LJV 046 JVD5	Swivel
I	LJV 029 JV502	Feed Hose - Dark Blue (4.2m)
J	LJV 036 JV57	Float
K	LJV 030 JV503	Feed Hose - Light Blue (4.9m)
L	LJV 028 JV50	Disconnect Swivel
M	LJV 031 JV52	Sweep Hose Complete
N	LJV 090 JWV100	Universal Wall Fitting Complete
O	LJV 081 JWV87	Wall Fitting Clip
P	LJV 082 JWV86	Wall Fitting Cap
Q	LJV 084 JWVBS012	O-Ring
R	LJV 083 JWV88	Wall Fitting Valve
S	LJV 086 JWVBS024	O-Ring
T	LJV 080 JWV85	Wall Fitting Body

CODE	PART #	DESCRIPTION
LJV 041	JWV1A	WALL FITTING COMPLETE W/ADJ
LJV 042	JWV2	STRAINER SCREEN FOR JWV1A
LJV 002	JV2	VENTURI SHELL
LJV 055	JV2B	DEFLECTOR PLATE ASSY
LJV 001	JV3	ADAPTOR
LJV 003	JV4	SHELL FLOAT
LJV 054	JV4B	FLOAT COVER BUTTON KIT
LJV 004	JV5	BOTTOM PLATE
LJV 046	JVD5	SWIVEL
LJV 051	JV6	PIN (FOR BOTTOM PLATE)
LJV 005	JV7	GEAR
LJV 047	JVF7	O' RING
LJV 006	JV8	PROPELLOR
LJV 007	JV9	SPACER
LJV 060	JVG10	SCREW
LJV 008	JV11	O'RING (SHELL)
LJV 009	JV12	ROLLER ARM
LJV 010	JV13	NOSE WHEEL
LJV 011	JV14	NOSE WHEEL HUB
LJV 012	JV15	STAINLESS STEEL WHEEL
LJV 045	JVD15P	MENDER NUT - PLASTIC
LJV 063	JV16	S/STEEL WHEEL HUB
LJV 013	JV17	PUSHER JET NOZZLE
LJV 014	JV18	O' RING
LJV 015	JV19	PUSHER JET NOZZLE HOLDER
LJV 069	JV20	O-RING FOR JWV22
LJV 016	JV21	WHEEL
LJV 017	JV22	WHEEL HUB
LJV 090*	JWV100	UNIVERSAL WALL FITTING COMPLETE
LJV 064	JWV22	BAYONET WALL FITTING COMPLETE
LJV 068	JV23	QUICK DISCONNECT ADAPTOR
LJV 065	JV24	STRAINER SCREEN FOR JWV22
LJV 070	JVLL25	PRESSURE RELEASE ASSEMBLY - RED

CODE	PART #	DESCRIPTION
LJV 056	JV28	QUICK DISCONNECT 16MM
LJV 053	JV29	GASKET FOR FUNNEL ADAPTOR
LJV 018	JV30	FUNNEL ADAPTOR
LJV 019	JV31	MESH BAG W/LOCK RING
LJV 020	JV32A	FINE BAG W/LOCK RING
LJV 048	LG35B	BEARING
LJV 058	JV40	SCREW
LJV 021	JV41	SCREW
LJV 022	JV42	NUT
LJV 023	JV43	SCREW
LJV 661	JV43S	SCREW
LJV 024	JV44	SCREW (PUSHER JET)
LJV 025	JV45	NUT
LJV 026	JV46	SCREW (BOTTOM PLATE)
LJV 646	JV46S	SCREW
LJV 027	JV48	SCREW (BACK WHEELS)
LJV 649	JV49	TAIL MENDER
LJV 028	JV50	DISCONNECT SWIVEL
LJV 031	JV52	SWEEP HOSE COMPLETE
LJV 032	JV53	HOSE SLEEVE
LJV 033	JV54	ROLLER RING
LJV 034	JV55	HOSE JET COLLAR
LJV 035	JV56	HOSE JET
LJV 036	JV57	FEED HOSE FLOAT
LJV 057	JV61	LOCK WASHER
LJV 037	JV62	SIDE WHEEL COMPLETE
LJV 039	JV64	SIDE WHEEL
LJV 611	JV70	BRASS WEIGHT - LARGE
LJV 613	JV71	BRASS WEIGHT KIT (2 X SMALL)
LLP 058	JV501	STARTER HOSE (WHITE)
LJV 029	JV502	FEED HOSE 1ST SECTION (DARK BLUE)
LJV 030	JV503	FEED HOSE 2ND SECTION (LIGHT BLUE)

*Obsolete as of June 2016